

Door controls

- A** Window winder left/right.
- B** Heating on all mirrors, push on/off.
- C** Rear view mirrors, turn to select, push sideways to adjust.



Digital Instrument Panel (DIP)

- A** Information bar with status of warnings, alarm, AS-Tronic gear and telephone.
- B** Information screen (red, vital warnings).
- C** Information screen (yellow warnings). Press menu selector switch to access main menu. Scroll and press to select.



Menu selector switch Digital Instrument Panel (DIP)

Press to access main menu. Scroll and press to select.

Menu's are:

- vehicle info
- warnings
- trip info
- settings
- fuel consumption
- boost pressure
- next service
- PTO counter



Roof console switches

- 1 Electric roof hatch.
- 2 Rotating beacon.
- 3 Switch off cab interior detection.
- 4 Alarm system LED.
- 5 Auxiliary heater.
- 6 Spare.
- 7 Spare.



Steering column stalk (left)

- Centre position (dipped beam with lights on).
- A** Horn.
 - B** Main beam and main beam flash.
 - C, D** Direction indicator left/right.



Steering wheel buttons (left)

- A + B** only for optional telephone car kit.
- A Top:** accept call.
- Bottom:** end or reject call.
- B Select driving:** 1 of last 10 calls.
- Select stationary:** directory scroll button.
- C** Exhaust brake on/off.

Steering wheel buttons (right)

- D** Speed limiter.
- Set:** actual speed as maximum speed.
- E** Cruise control.
- Top:** resume the set speed.
- Bottom:** off.
- F** Cruise control.
- Top:** set speed or adjust to higher speed.
- Bottom:** set speed or adjust to lower speed.



Steering column stalk (right)

- Position 1:** Intermittent wipe.
- Position 2:** Wipe speed (low).
- Position 3:** Wipe speed (high).
- Position 4:** Wipe/wash.




Lighting switch

- 1 Parking and marker lights on.
- 2 Headlamps, parking and marker lights on.



Manual gearbox

- Depending vehicle configuration:
- 5, 6 or 9 gears.
 - 9 gear: 4 low range, 4 high range, 1 crawl. (Pre)select range at front side gearlever.

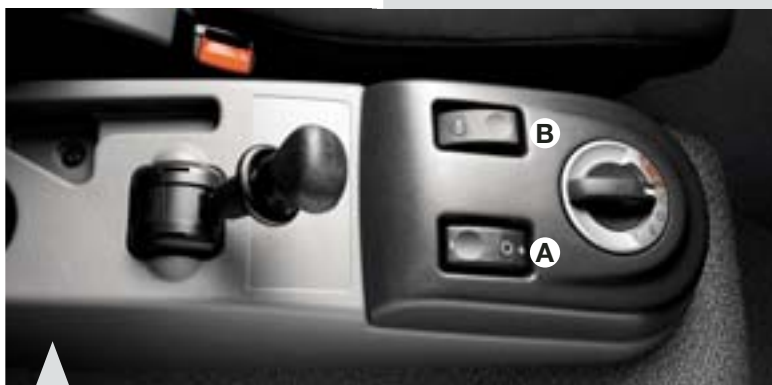

Automated gearbox

- N** Neutral.
 - D** Drive.
 - R** Reverse.
- And manoeuvring positions (adjusted gas throttle settings for slow, flowing movement. Limited torque/rev and clutch slip).

Automated gearbox

- A** Shift up: +
Shift down: -
- B** Switch between manual and automated mode (indication M or A in master display). In Manual mode: press for optimal gear choice, press again for Manual mode.



Heating & ventilation

- | | |
|---|--|
| <p>1 Air distribution.</p> <p>2 Air temperature.</p> <p>3 Fan speed.</p> <ul style="list-style-type: none"> • Fresh air 1-4. • Re-circulation 1-3 (use short periods of time only). | <p>4 Airconditioning (only when engine running and blower not on 0).</p> |
|---|--|



Centre console

- | | | |
|---|---|--|
| <p>1 Flasher hazard warning lights.</p> <p>2 Worklamp/loadspace lighting.</p> <p>3 Spare.</p> | <p>4 Suppression switch, reversing alarm.</p> <p>5 Main switch.</p> <p>6 Unlocking co-drivers door.</p> | <p>7 Spare.</p> <p>8 PTO operation.</p> <p>9 De-activating load space detection.</p> |
|---|---|--|



Control panel

- 1 Dimmer dashboard lighting.
- 2 Differential lock.
- 3 Spare.
- 4 Front/rear fog lights, position 1 front, 2 front and rear.



Headlamp height adjustment



Adjustable steering column

Push switch up to unlock (lock automatically after 20-30 seconds).
Push switch down to lock.

Please note specific vehicle configurations may differ from these instructions.

DW141966/GB:0506

Enjoy your new DAF LF.
Please read these instructions to ensure that you quickly feel at ease in the LF.
Full details are available in the driver's handbook.



Quick Guide DAF LF Series

