



Door controls

- A** Rear view mirror, select and adjust.
- B** Heating on all four mirrors, on/off.
- C** Window winder left/right, with express down (activate 0,5 sec).



Master display

- A** Information bar with status of warnings, alarm, AS Tronic gear, cruise-/down hill speed control and telephone.
- B** Information screen (red, vital warnings).
- C** Information screen (yellow warnings). Press Menu Selector Switch to access main menu. Scroll and press to select.




Menu Selector Switch Master Display

Press to access main menu. Scroll and press to select.

Menu's are:

- vehicle info
- warnings
- trip info
- settings
- fuel consumption
- boost pressure
- next service
- PTO counter

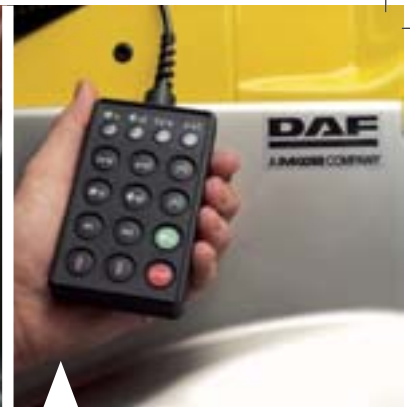

Remote control

Setting chassis height, with 2 memory settings and automatic setting of driving height.

Version with Axle Load Monitoring:

- Also calibration of axle load values (preferably 1/year).



Steering column switch (left)

- Centre position (dipped beam, lights on).
- A** Headlight flash, **B** Main beam.
 - C, D** Direction indicator left/right.
 - E** Horn.
 - F** Windscreen washer.
 - G** Windscreen wiper.
 - Intermittent wipe (interval time set by on, time off, on).
 - 0, 1, 2** Wipers off, low- and high speed.



Steering wheel buttons (left)

- A Top:** accept call.
Bottom: end or reject call.
- B Select driving:** 1 of last 10 calls.
Select stationary: listing phonebook.
- C Downhill speed control**
set: current speed set for descent.
Set on flat road with cruise control on: cruise speed + 3 kmh.

Steering wheel buttons (right)

- D** Speed limiter
set: actual speed as maximum speed.
- E** Cruise control
Top: resume the set speed.
Bottom: off.
- F** Cruise control
Top: set speed or adjust to higher speed.
Bottom: set speed or adjust to lower speed.



Steering column switch (right)

- (Manual gearbox and **MX engine brake**).
- Engine brake on/off (gas throttle overrules setting, gear changing not).
 - Speed limiter set/off.
 - Cruise control set/resume/off.
- (Manual gearbox and **Intarder**).
- 1/3, 2/3, full intarder operation.



Lighting switch

- 1** Parking and marker lights on.
- 2** Headlamps, parking and marker lights on.



Manual gearbox

- H-pattern 4 low range, 4 high range:
- B** (Pre)select range at front side gearlever.
 - A** Half ranging (splitting) at the side of the gearlever.



Automated gearbox

- N** Neutral.
 - D** Drive.
 - R** Reverse.
- And manoeuvring positions (adjusted gas throttle settings for slow, flowing movement. Limited torque/rev and clutch slip).



(AS-Tronic and **MX engine brake**).

- Engine brake on/off (gas throttle overrules setting, gear changing not).
 - Auto/manual (use twice for search in manual).
 - Shift up/down (one click, one gear).
- (AS-Tronic and **Intarder**).
- AS-Tronic use similar.
 - 1/3, 2/3, full intarder operation.



Heating & ventilation

- Fan speed.
- Air distribution.
- Air temperature.

Automatic Temperature Control

- Set temperature is thermostatically controlled.
- Fan speed and air distribution to own preference.



Centre console

- | | | |
|--|---|----------------------------------|
| 1 Flasher hazard warning lights. | 4 Pos 1: night light (no reflections whilst driving). | 7 Cab heater. |
| 2 Main switch. | 5 Interior light off (all off and remain off). | 8 Unlocking co-drivers door. |
| 3 ASR (slightly more traction at low speed, by allowing wheel slip). | 6 Roof hatch. | 9 Interior light co-driver side. |



Control panel

- 1 Spare.
- 2 Resume normal driving height (air suspension).
- 3 Lifting trailing axle.
- 4 Third brake integration (off only when noise of retarders is unacceptable).
- 5 Cross-axle differential lock.
- 6 Traction control.

- A** Airconditioning; Blower position 0 not active.
- B** Recirculation flap; Use short periods of time only.



Dashboard panel (left)

- 1 Work lamp/ load space lighting.
- 2 Headlamp height adjustment.
- 3 Front/rear fog lights.
- 4 Instrument lighting dimming.



Dashboard panel (right)

- 5 Gearbox PTO.
- 6 Engine PTO.
- 7 Deactivating load space detection.
- 8 Switching off cab interior detection.

Please note specific vehicle configurations may differ from these instructions.

DW1141845/GB0106



Please read these instructions to ensure that you quickly feel at ease in the XF105. Full details are available in the driver's handbook.

Quick Guide DAF XF105

